



1. ASSEMBLE FLOAT VALVE, WASHER, BRACKET AND NUT AS SHOWN ABOVE.
2. INSTALL A COMPRESSION FERRULE TO BOTH ENDS OF THE TUBING ABOUT 1 INCH FROM THE ENDS
3. INSTALL A SLEEVE TO BOTH ENDS OF TUBING
4. INSTALL A INSERT TO BOTH ENDS OF TUBING
5. INSERT ONE END OF TUBING INTO FLOAT VALVE AND THE OTHER END INTO HOSE BIB ADAPTER
6. TIGHTEN BOTH COMPRESSION FERRULES WITH A WRENCH
7. INSTALL FLOAT VALVE BY PLACING BRACKET UNDER A ROCK AT THE EDGE OF THE POND. WATER LEVEL CAN BE ADJUSTED BY LOOSENING THE THUMB SCREW AND RAISING OR LOWERING THE FLOAT

**PARTS LIST**

- 1 FLOAT VALVE WITH NUT AND WASHER
- 1 GALVANIZED METAL BRACKET
- 1 HOSE BIB ADAPTER
- 2 BRASS COMPRESSION FERRULES
- 2 PLASTIC SLEEVES
- 2 BRASS INSERTS
- 10 FEET OF TUBING

DRIVER FLOAT VALVE  
 McKINLEYVILLE,CA  
 (707)839-0272