



Hanging Basket Kit

1. Attach Tee filter (FT) to hose spigot.
2. Next attach the female hose by $\frac{1}{4}$ " barb fitting (H14BS) to the filter outlet.
3. Run the $\frac{1}{4}$ " micro tubing (1450) from the spigot along the edge of the porch or balcony past all your hanging baskets.
4. Use the $\frac{1}{4}$ " tubing clamps (S14SC-10) to secure the $\frac{1}{4}$ " in place.
5. At each basket, cut the $\frac{1}{4}$ " tubing and insert a $\frac{1}{4}$ " T fitting (14T-10).
6. Then bring a piece of $\frac{1}{4}$ " tubing down to the pot and attach one staked dripper (DCOB1-5) to the end.
7. Stake the dripper into your basket.
8. End the $\frac{1}{4}$ " line with a goof plug (14GP2-10)
9. Turn your system on and watch your baskets get watered with ease!

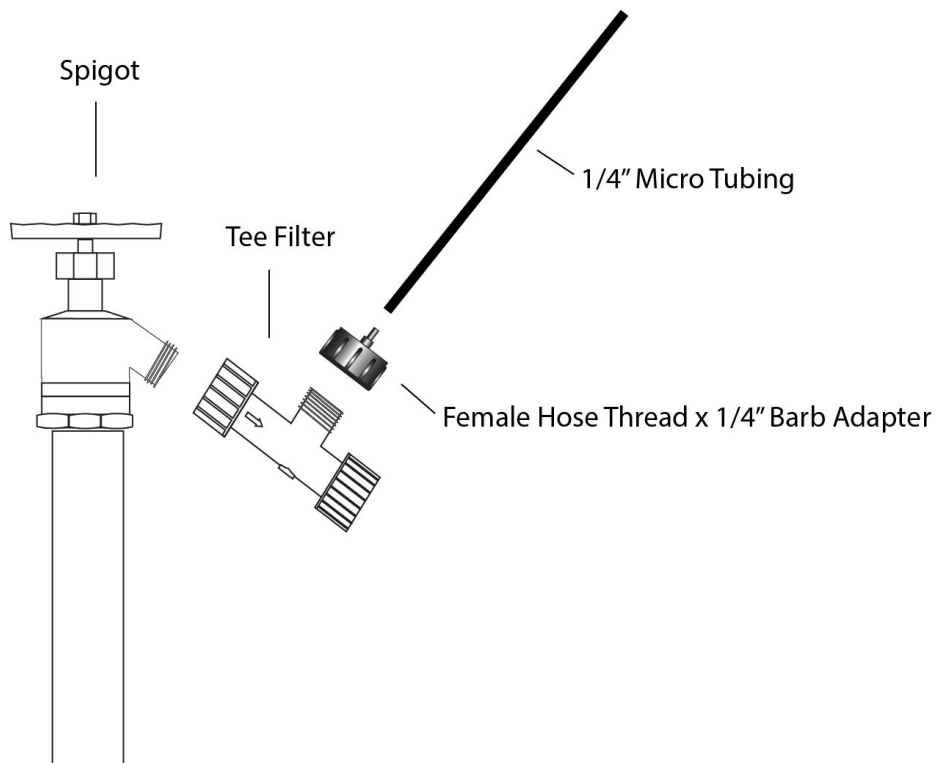

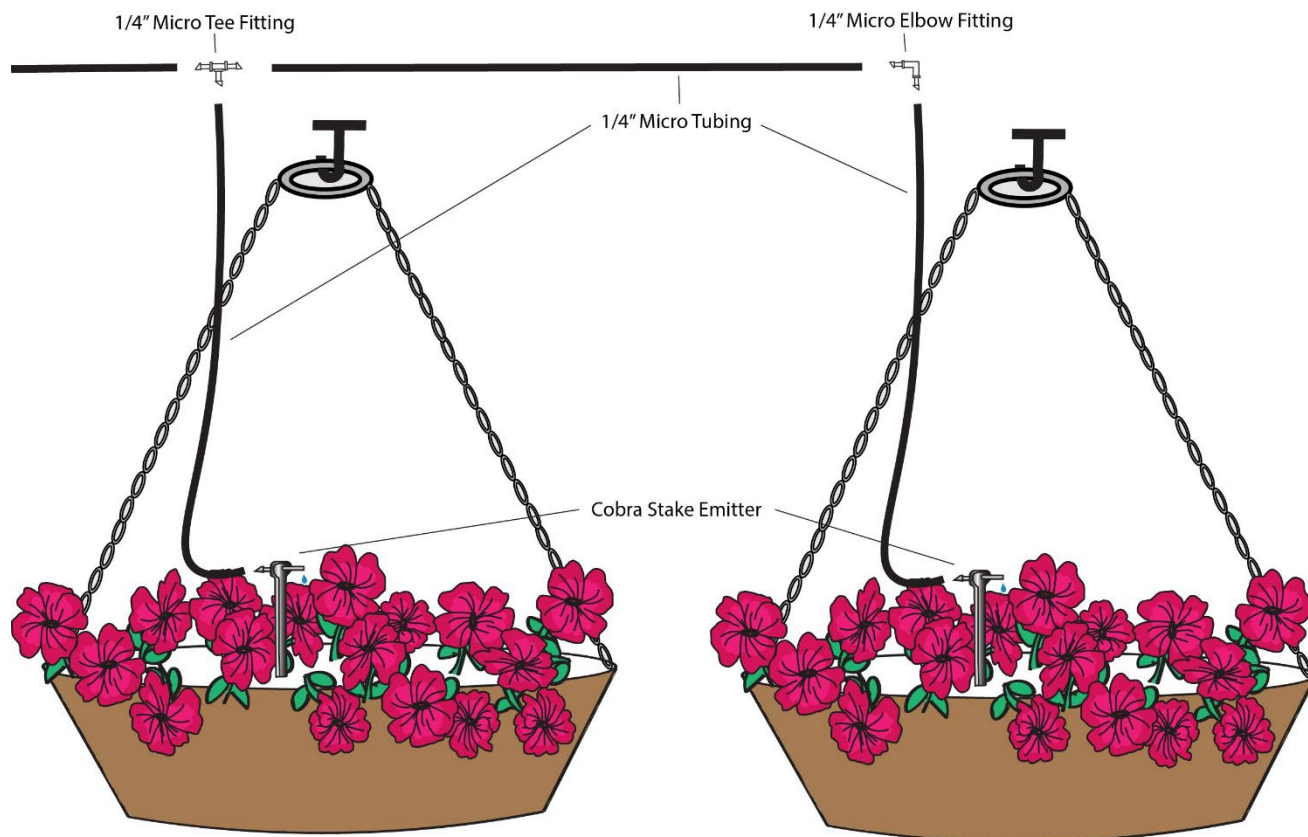

If you have any further questions about our products, or installing your drip system, please contact us at 800-522-3747 or via email at support@dripworks.com or visit our store at DripWorks, 190 Sanhedrin Circle, Willits, CA 95490