


## Most Common Drip Irrigation System Start Using Hose Threaded Components

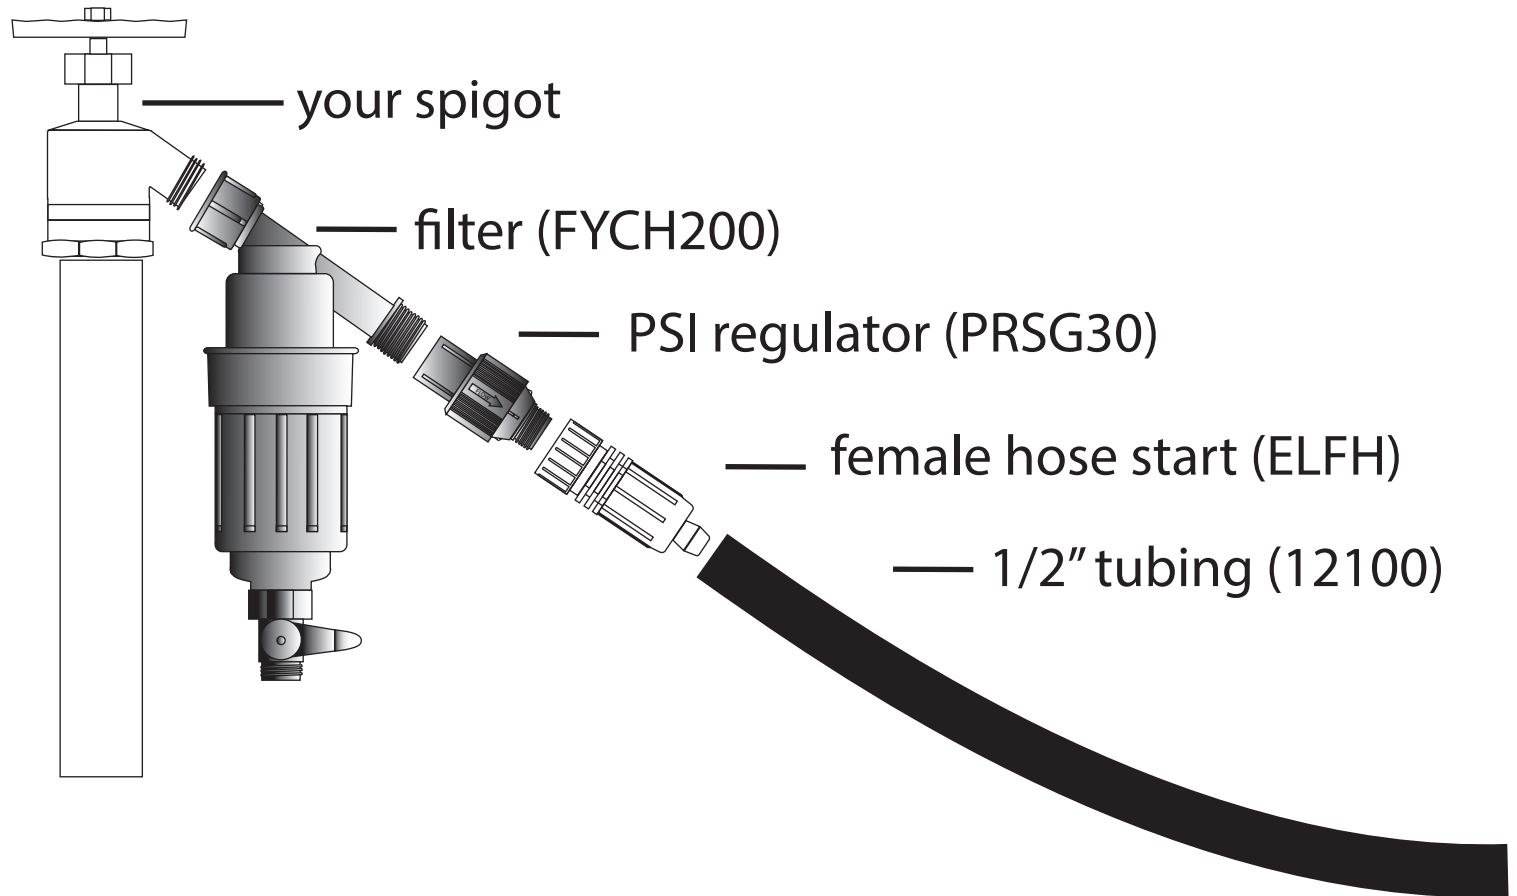

\*Components are dependent on available flow and pressure. Check individual specifications.

This easy to install setup is most commonly used in small to medium backyard garden situations. Because this system start uses hose threaded components it requires no Teflon tape or pipe dope on the threads and no tools for installation. The system can be easily automated by inserting a hose threaded battery timer between the spigot and the filter. DripWorks sells complete kits that include a hose threaded system start.