


Backyard Misting Kit Assembly Instructions

Congratulations on purchasing one of DripWorks' all-inclusive kits, the easiest way to get a complete drip irrigation system setup to fit your gardening needs. The kit has two parts; the faucet assembly or system start portion that brings the water to your garden and the misters that distribute that water to your plantings.

System Start


This portion of the kit includes the filter, hose start fitting, and a roll of supply tubing.

1. Connect the swivel end of the Tee filter to your faucet
2. Screw the hose start fitting (H14B) to the outlet of the Tee filter
3. Insert ¼" tubing onto the barb and roll the tubing out
4. Secure the tubing to wooden surfaces with ¼" support clamps (S14SC)

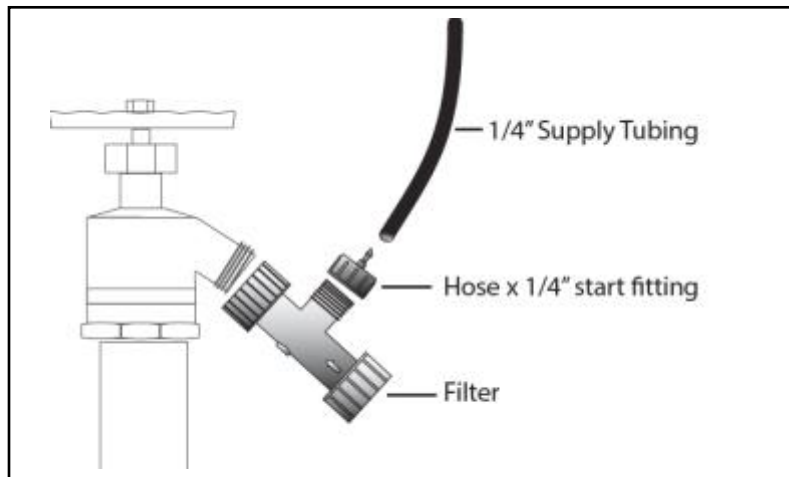

Misters

1. Add misters to the ¼" supply tubing, cut the ¼" tubing and insert a ¼" tee (14T-10). Slip on a short piece of tubing and insert a mister.
2. For the last mister in the series, cut the ¼" tubing where desired and insert the ¼" elbow (1490-10) with a short piece of ¼" tubing and insert the mister.
3. Turn water on and adjust as needed.

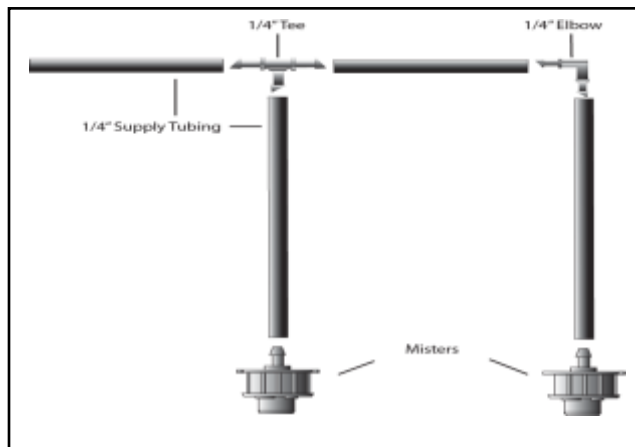

If you have any further questions about our products, or installing your drip system, please contact us at 800-522-3747 or via email at support@dripworks.com or visit our store at DripWorks, 190 Sanhedrin Circle, Willits, CA 95490