



Where to Place an Air Bleed Valve in Your Drip System

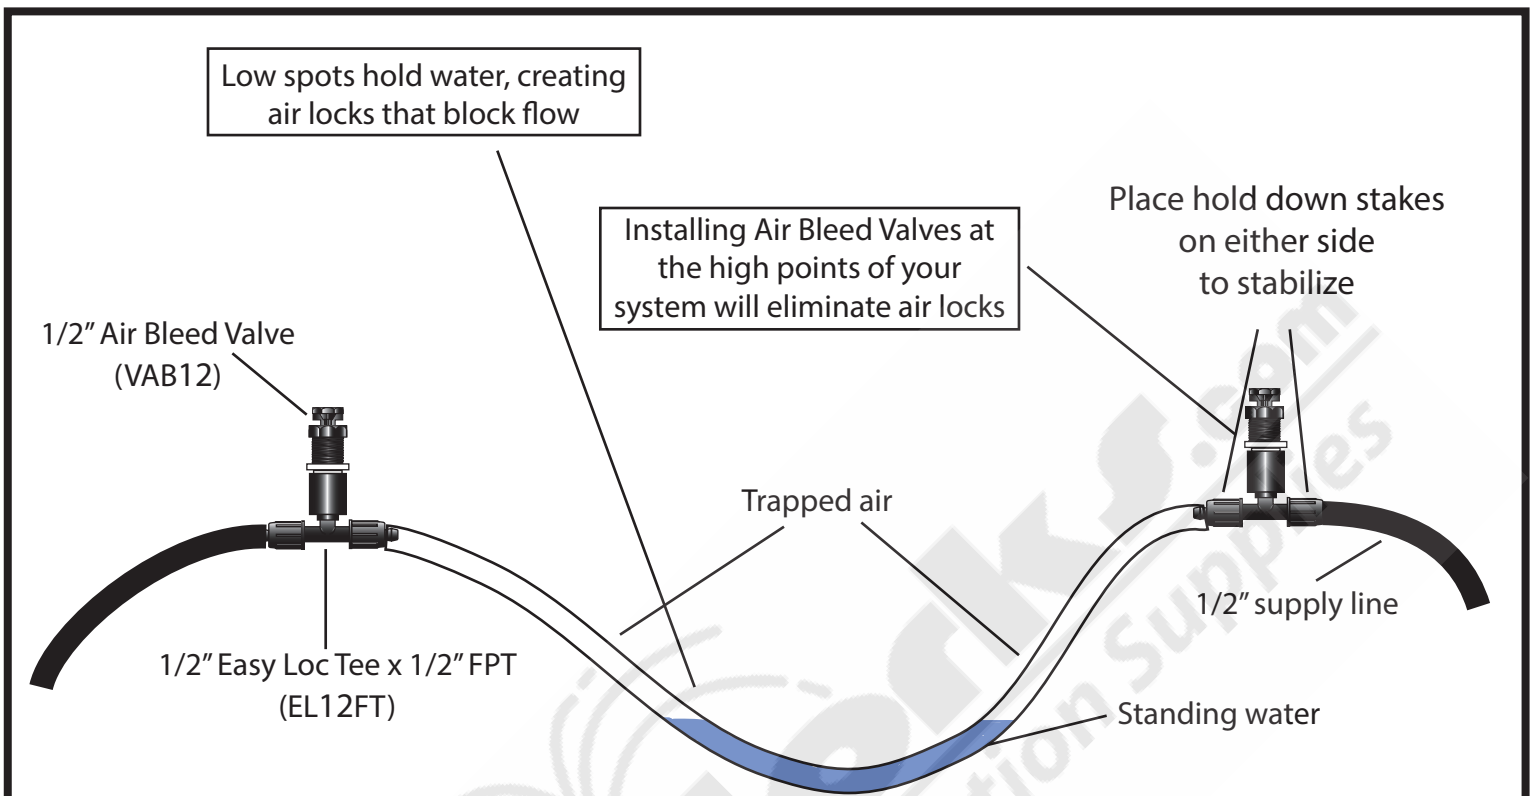

Example Using 1/2" Poly Tubing

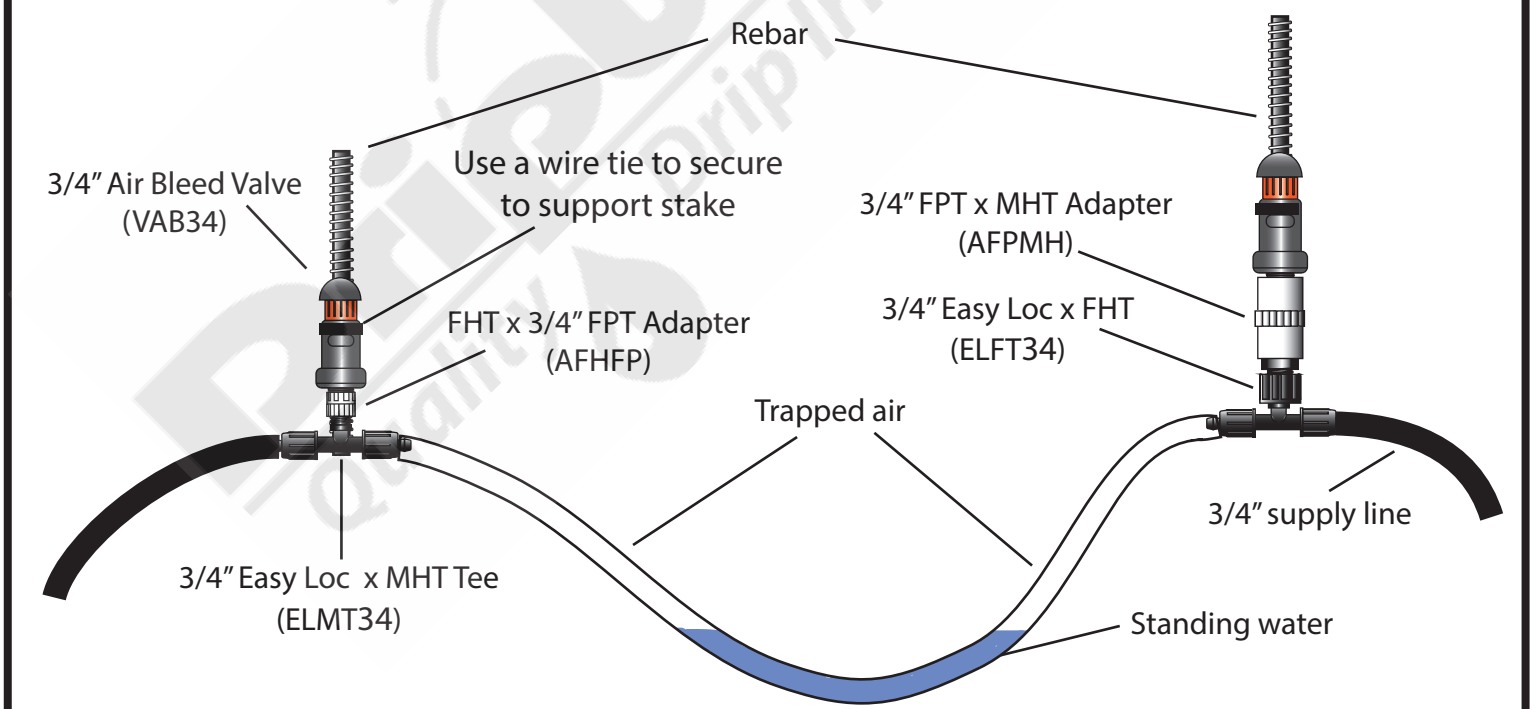

Example Using 3/4" Poly Tubing