


How to Use Mini-Sprinklers with the POMELT Assembly

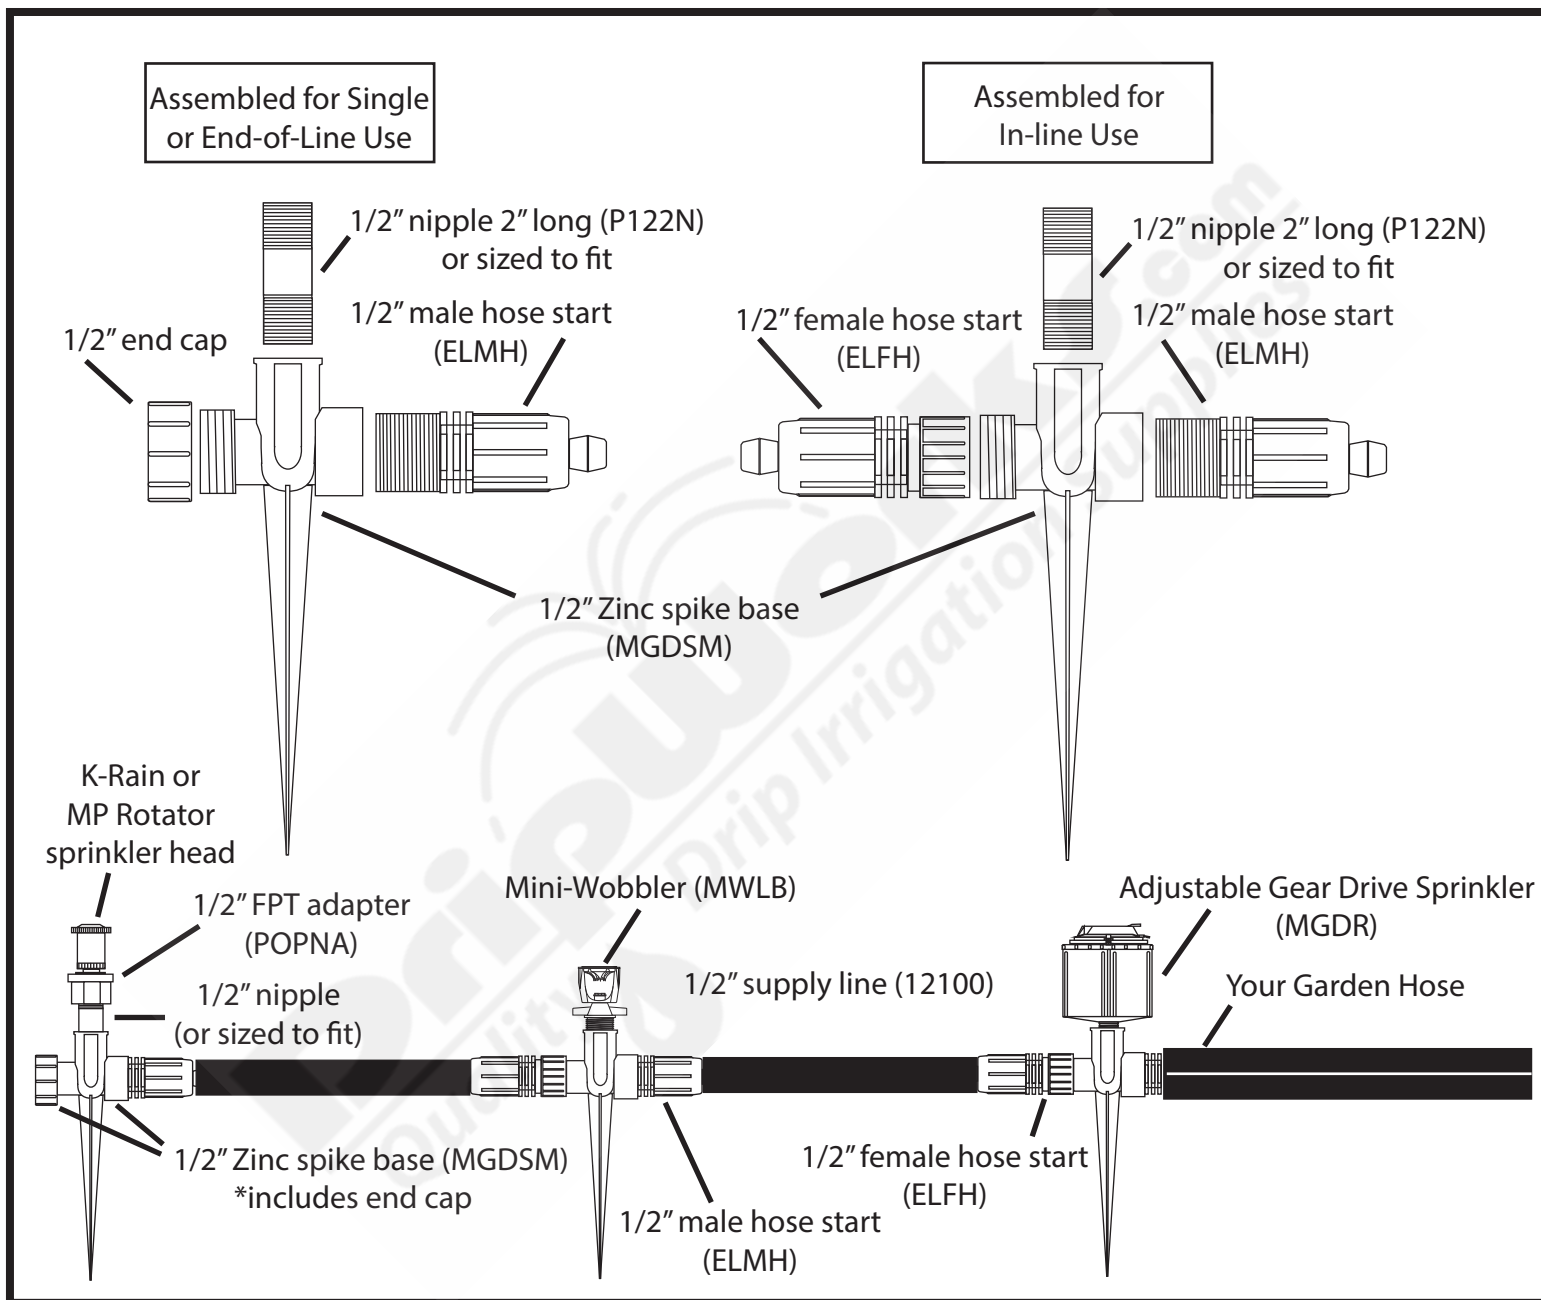

This mini-sprinkler support assembly is constructed around a heavy-duty zinc stake. Using the included nipple (P122N) and an adapter (POPNA) it will accommodate an MP Rotator or KRain mini-sprinkler or, removing the nipple, a Mini-Wobbler (MWLB) or Adjustable Gear Drive Sprinkler (MGDR). They can be used to create a sprinkler array by hooking a hose up to the inlet of the first one in the line then stringing the rest together with lengths of 1/2" poly tubing and capping the outlet of the last one in line. Be sure to wrap the 1/2" nipple threads with teflon tape (PCTEF) to insure a watertight seal.